

LABEL DISPENSER

MODEL: SH-408



USER'S MANUAL
OPERATION, MAINTENANCE AND TROUBLE SHOOTING

Contents

A. External View-----	3
B. Specification-----	3
C. Label setting procedure-----	4
D. Trouble shooting-----	4
E. Parts list-----	5
F. Electric diagram-----	6

A. External view

- Check all parts
 - Main body
 - Hanger bracket
 - Hanger shaft
 - Hanger guide(pair)
 - U-pin
 - AC-Code
 - Manual




Instal hanger bracket if separated.

B. Specification

- Label size -Max 200(W) X 310(L)mm
 - Min 10(W) X 25(L)mm
- Label roll - Max 300mm
- Speed - 12m/min
- Power - 110VAC
- Motor - SPG S8125GX, Gear S8KA30B
- Timing belt - MITSUBISHI 144XL
- Sensor - SANIL(SB-11, BR-6M)
- Counter - Autonics(LA7N-FR)
- Machine dimension - 255(W) X 340(L) X 345(H)mm
- Net weight - 9.2Kgs
- Fuse - 3A

C. Label setting procedure

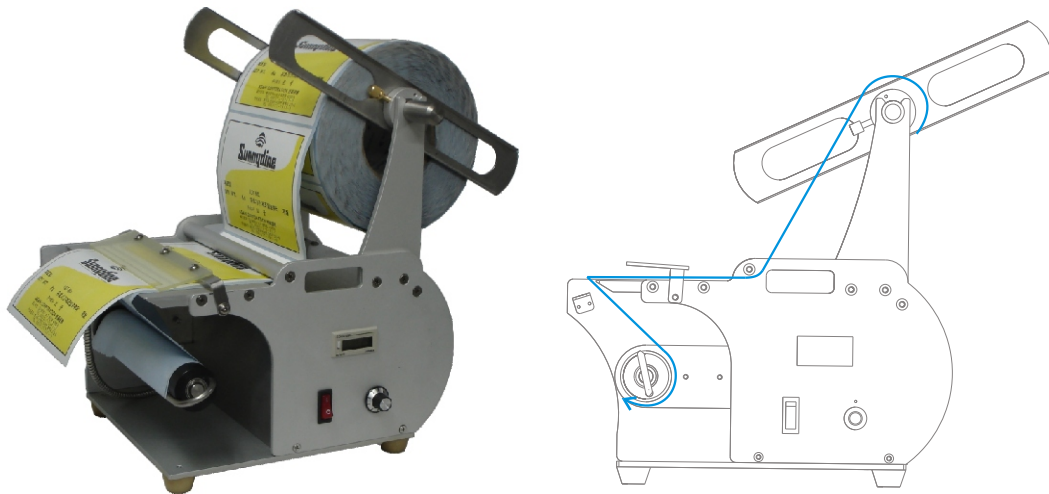

D. Trouble shooting

Trouble	Shooting
Machine does not start	<p>Check if power cord is connected to the machine and power outlet. Check if the fuse is blown.(→ Means burn) Remove fuse and replace to new.</p>
Label comes out continually	<p>Check volume is too high. Please down the volume. Its better to start volume low.</p>
Label comes out too slowly and not steadily	<p>Check urethane press sheet too press → loose urethane press sheet.</p>